



# STRAITEDGE™ INFLATABLE CANOE

OWNER'S MANUAL  
*MODEL AE1008*

PATENTED



## 2 PERSON CANOE

### IMPORTANT!

PLEASE READ THIS MANUAL CAREFULLY BEFORE PROCEEDING. AFTER READING THIS MANUAL, SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.



INFLATABLE KAYAKS WITH CUTTING  
EDGE TECHNOLOGY

## INTRODUCTION

---

It is our goal, at Advanced Elements, to develop new and unique paddlesports products that enhance our customers' outdoor experience. Our focus is on designing and manufacturing "Inflatable kayaks with cutting edge technology". Our kayaks incorporate many different materials and components and deliver high performance at a very reasonable price. We are the makers of the AdvancedFrame™ Inflatable kayaks, Lagoon™ Inflatable kayaks and StraitEdge™ Canoe and Kayaks. The AdvancedFrame™ Kayaks are a hybrid of a folding frame kayak and an inflatable kayak. Its bow slices through water like a knife and rivals the tracking of hard-shell kayaks. The stern acts as a skeg increasing the tracking performance. The Lagoon™ kayaks are durable and lightweight. They have built-in rigid forms that increase the performance once it is fully inflated. You can take our inflatables with you anywhere in the world and no roof rack is needed! Keep it in the trunk of your car and paddle whenever you want or pack it into a remote wilderness area and paddle where no one has paddled before. Simply inflate with a foot pump and hit the water in minutes. Please visit our website for more information on our products or to find a dealer near you.



## TABLE OF CONTENTS

---

1. Caution/Safety .....	4
1.1 Boating Safety.....	5
2. Specification.....	6
2.1 Capacity .....	6
2.2 Features .....	6
3. Assembly/Inflating/Deflation Instruction .....	7
3.1 Assembly .....	7
3.2 Understanding Your Valves.....	8
3.3 Inflating.....	10
3.4 Over Inflation.....	11
3.5 Deflation.....	11
3.6 Folding .....	11
4. Guidelines for Usage .....	12
5. Proper Care and Storage .....	12
6. Repairs.....	13
6.1 Repairing Small Punctures and Cuts.....	13
6.2 Repairing Pinholes .....	13
7. Troubleshooting.....	14
8. Statement of Origin .....	17
9. Declaration of Conformity .....	18
10. Warranty and Registration.....	19

## 1. CAUTION - SAFETY WARNING

Users of this product agree by their use to accept the inherent risks involved in this paddlesports activity and agree to follow all instructions, cautions, and warnings carefully before using this Canoe.

(PLEASE READ CAUTION STATEMENT CAREFULLY)

### CAUTION

#### SAFETY WARNING

PADDLESPTS CAN BE VERY DANGEROUS AND PHYSICALLY DEMANDING. THE USER OF THIS PRODUCT SHOULD UNDERSTAND THAT PARTICIPATION IN PADDLESPTS MAY INVOLVE SERIOUS INJURY OR DEATH. OBSERVE THE FOLLOWING SAFETY STANDARDS WHENEVER USING THIS PRODUCT.

- GET PADDLESPTS INSTRUCTIONS SPECIFIC TO THIS TYPE OF CRAFT.
- OBTAIN CERTIFIED FIRST AID TRAINING AND CARRY FIRST AID AND RESCUE/SAFETY EQUIPMENT.
- ALWAYS WEAR A NATIONALLY APPROVED PERSONAL FLOTATION DEVICE.
- ALWAYS WEAR A HELMET WHERE APPROPRIATE.
- DRESS APPROPRIATELY FOR WEATHER CONDITIONS; COLD WATER AND/OR COLD WEATHER CAN RESULT IN HYPOTHERMIA. CHECK YOUR EQUIPMENT PRIOR TO EACH USE FOR SIGNS OF WEAR OR FAILURE.
- NEVER PADDLE ALONE.
- DO NOT PADDLE IN FLOOD CONDITIONS.
- BE AWARE OF APPROPRIATE RIVER WATER LEVELS, TIDAL CHANGES, DANGEROUS CURRENTS, WEATHER CHANGES, AND STRONG OFF SHORE WINDS.
- SCOUT UNFAMILIAR WATER; PORTAGE WHERE APPROPRIATE.
- DO NOT EXCEED YOUR PADDLING ABILITY; BE HONEST WITH YOURSELF.
- CONSULT YOUR PHYSICIAN PRIOR TO BEGINNING YOUR PADDLESPTS TRAINING.
- YOU MUST NOT USE ALCOHOL OR MIND ALTERING DRUGS PRIOR TO USING THIS PRODUCT.
- FOLLOW THE MANUFACTURER'S RECOMMENDATIONS FOR THE USE OF THIS PRODUCT.
- IF ADDITIONAL OUTFITTING IS REQUIRED, USE MANUFACTURER'S APPROVED MATERIALS ONLY; DO NOT IMPAIR ENTRY OR EXIT ACCESS.
- READ OWNER'S INFORMATION PACKET PRIOR TO USING THIS PRODUCT.

THE USER OF THIS PRODUCT ACKNOWLEDGES BOTH AN UNDERSTANDING AND AN ASSUMPTION OF THE RISK INVOLVED IN PADDLESPTS.

**ADVANCED ELEMENTS, INC.**





**TOLL FREE 866-262-9076**

Please read this entire manual for additional safety information. Please pay close attention to items marked **DANGER, WARNING, CAUTION, IMPORTANT, NOTICE, NEVER, and ALWAYS.**

## 1.1 Boating Safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

 <b>DANGER</b> 	<p>Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury or substantial property damage.</p>
 <b>WARNING</b>	<p>Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury or property damage.</p>
 <b>CAUTION</b>	<p>Indicates a potentially hazardous situation which, if not avoided, may result in property damage.</p>
<b>CAUTION</b>	<p>Used without the safety alert symbol indicates a potentially hazardous situation, which, if not avoided, may result in property damage.</p>
<b>NOTICE</b>	<p>Indicates installation, operation or maintenance information which is important but not hazard-related.</p>

The precautions listed in this manual and on the craft are not all-inclusive. If a procedure, method, tool or part is not specifically recommended, you must satisfy yourself that it is safe for you and others, and that the craft will not be damaged or made unsafe as a result of your decision. REMEMBER - always use common sense when paddling YOUR CANOE!

## 2. SPECIFICATION

Dimensions:	
Length:	11'
Width:	36"
Weight:	41 lbs (19 kg)
Max. Person Capacity:	400 lbs (181 kg)
Max. Persons & Gear Capacity:	400 lbs (181 kg)
Recommended Pressure:	
Main chambers:	1.5 psi (0.10 bar)
Floor chamber:	1.0 psi (0.07 bar)
Bow/Stern bag:	1.5 psi (0.10 bar)
Seat cushions:	1.0 psi (0.07 bar)



### 2.1 Capacity

The person/load capacity is determined by the availability of proper seating on the canoe. Acceptable seating determines the number of passengers, not the overall load capacity.



StraitEdge™ Canoe Capacity Label

**⚠ WARNING:** Do not exceed the certified maximum capacities under any circumstances. Overloading will reduce freeboard and increase the likelihood of swamping, especially in heavy seas. Overloading causes handling to become sluggish, making it difficult to react quickly.

### 2.2 Features

#### SPECIAL FEATURES:

*Hull Design:* Built-in Aluminum ribs define the bow and stern and improve tracking.

*Comfortable:* High support, adjustable padded seats provide comfort for hours of paddling.

*Easy to Set Up:* Pre-assembled at the factory. Simply unfold, inflate and attach the seats.

*Stable:* Wide beam and low center of gravity combine for a very stable paddling experience.

*Durable:* Heavy-duty Polyester and PVC Tarpaulin material for added durability.



### 3. ASSEMBLY/INFLATING/DEFLATION INSTRUCTION


#### Bow and Stern Design

The bow and stern have removable ribs of high grade aluminum. When the chambers are inflated these ribs press against the outer cover and form a high performance bow and stern.

#### 3.1 Assembly

Your canoe comes from the factory pre-assembled. The only assembly you should need to do is attach the adjustable seats.

1. Insert aluminum Bow rib and the Stern rib into the webbing slots on the StraitEdge™ air bags and webbing slots on the canoe floor, at the bow and stern.

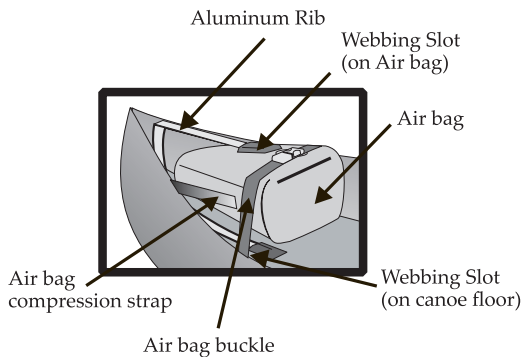

2. Attach air bags to the outer cover by tightening the “air bag compression straps” and buckling the “air bag buckle”. Do this while the air bag is deflated. These are preset at the factory and may not require any adjustment.
3. Attach adjustable seat to the StraitEdge side tubes by fastening buckles.

### 3.2 Understanding Your Valves

Advanced Elements StraitEdge™ Canoe uses the following valves. The Advanced Elements spring valve has the function and durability of other military type valves and is compatible with most standard pumps. The lock nut holds the valve in place with the cover for easy inflation. The following figures will have details on how to operate the valves.

**To Inflate:** The valve’s plunger stem should be in the up/outward position flush with the valve threading.

**To Deflate:** The valve’s plunger stem should be set in the down/inward position recessed in the valve threading.

**In order to switch the valve from inflate to deflate or vice-versa, simply use your finger to press the valve stem down/inward and rotate it a 1/4 turn to either lock it down for deflate, or unlock it (stem will spring up) for inflate.**

#### How the Spring Valve Works:

When the valve is in the inflate (up/outward) position, the air being pumped in pushes the spring-loaded plunger open, allowing air to enter the air chamber, but not letting it escape. When the valve is in the deflate (down/inward) position, the spring loaded plunger is wide open allowing the air to come rushing out of the air chamber. If the valve is in the inflate position, the valve’s plunger stem will be flush with the rim of the valve. If the valve is in the deflate position, the valve’s plunger stem will be inside, or lower than, the rim of the valve. To change the valve from the inflate position to the deflate position, simply use your finger to press the valve plunger stem down/inward, and give it a 1/4 turn. This will lock the plunger open and allow the air to rush out. Use the same procedure in reverse to unlock the valve plunger, allowing it to spring up into the inflate position.

**Special Note:** If you are using a 12v inflator, like those that come with most inflatable mattresses or those that plug into car cigarette lighters, you may need to have the valve in the deflate (down/inward) position because these types of pumps typically do not provide enough air pressure to press the plunger open to allow air into the air chamber. Additionally, 12v inflators do not provide enough pressure to fully inflate the kayak, so you will need a secondary pump to finish the job.

**Using the NEW "Screw-on" Spring Valve Adaptor:**

The screw-on Spring Valve Adaptor was designed to enable the pump hose to securely connect to the Advanced Elements Spring Valve without falling off during inflation, making inflation easier. The valve adaptor also has a semi-circle protrusion that depresses the valve stem, opening the valve slightly to allow pumps with pressure gauges to take a constant reading. When inflating the kayak using the Spring Valve Adaptor, the valve should be in the inflate position.

**Special Note:** The Spring Valve Adaptor comes with all current Advanced Elements pumps, with the exception of the 12v inflator, and will attach to any Advanced Elements pump that does not have the adaptor already included, with the exception of the 12v inflator. The Spring Valve Adaptor will also attach to some other manufacturer's pumps, but you must check the attachment style at the end of the pump hose to be sure it will fit.

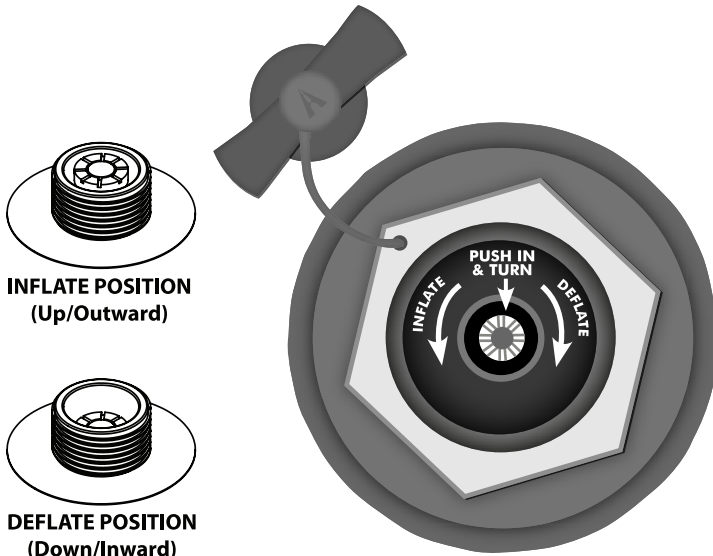


Figure 1. Inflate/Deflate Spring Valve

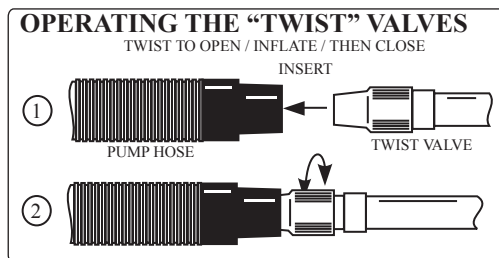


Figure 2. Inflate/Deflate Twist Valve

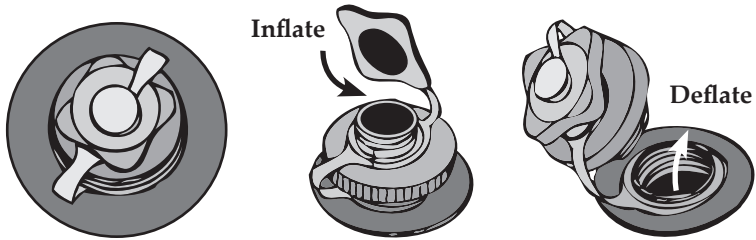


Figure 3. Inflation/Deflate Boston Valve

To begin inflating your kayak, you will need a **Bellows Foot Pump** or a **Double Action Hand Pump**. **Never use compressors, CO2 or compressed air as they may damage your kayak.**

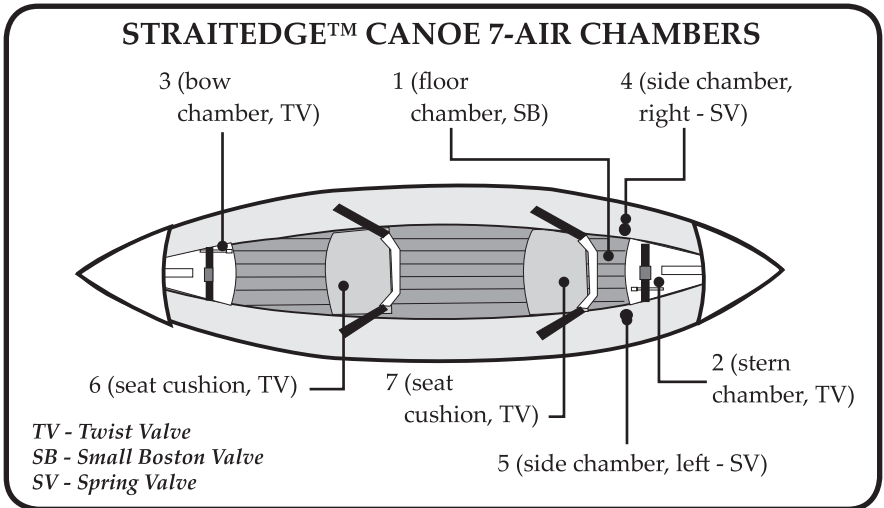


Diagram of Inflation Chambers

### 3.3 Inflating

**IMPORTANT:** Before inflating, check to be sure that the canoe is completely assembled. Inflate your canoe in the following order. **Failure to follow these instructions may cause damage to your canoe. Do not over inflate.**

1. Locate chamber 1 (floor). Attach pump hose to valve and Inflate until firm (1.0 psi **ONLY**). Position in the center of the canoe (**CAUTION: Do not over inflate**).
2. Proceed to chamber 2 and 3. (Bow and Stern Bags) Inflate until firm (1.5 psi **ONLY**).
3. Locate chambers 4 and 5 right and left "side tubes". Check to be sure spring valve is in the inflate position (See Figure 1). Inflate chambers until firm (1.5 psi **ONLY**). **Do not over inflate.**
4. Locate Chambers 6 and 7 (seat cushions). Inflate Chambers to desired firmness (Max 1.5 psi).

### 3.4 Over Inflation


**⚠ CAUTION:** Water temperature and weather will affect the air pressure of the canoe. In cold weather and water your canoe will lose some pressure. If this occurs, you may want to add a bit more air to the canoe to improve performance. In hot weather or prolonged sunlight, the air inside the canoe will expand. You must let some air out of the appropriate chambers to prevent the canoe from failing due to overpressure. You should avoid exposing your canoe to extreme temperatures (hot or cold).

### 3.5 Deflation


1. Remove the caps from chamber 4 and 5.
2. Push stems inward and rotate to deflate position (*See Figure 1*).
3. Twist open valve bodies to chambers 1, 2, 3, 6, and 7.
4. Once the chambers are deflated you can use your pump to vacuum out any additional air for improve folding.
5. Make sure all valves are closed tightly and properly.

### 3.6 Folding

1. Completely deflate all air chambers and thoroughly dry canoe and remove the seats.
2. Fold in half, down the center, lengthwise.

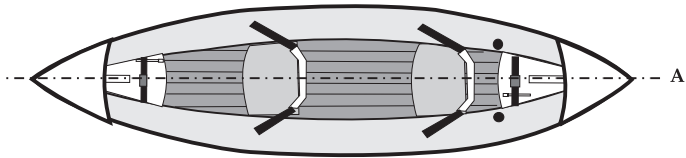

3. Fold into 4 equal sections.

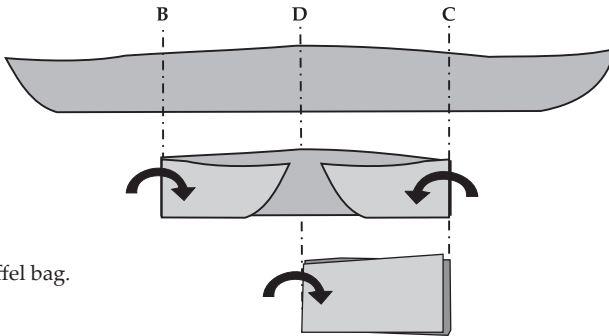

4. Place into duffel bag.

## 4. GUIDELINES FOR USAGE

Paddlesports can be very dangerous and physically demanding. The user of this product should understand that participation in paddlesports may involve serious injury or death. Observe the following safety standards whenever using this product. The user of this product acknowledges both an understanding and an assumption of the risk involved in paddlesports.

After you have inflated your canoe and before you put it in the water, inspect your equipment for obvious signs of wear or failure. Review local rules and regulations and read again the “CAUTION” statement.

Most areas have local laws and regulations about the use and equipment of small boats. Usually a phone call to the local authorities will provide you with the needed information. Some areas may require that you register and display a registration number on the front of your canoe. Once you have been issued a number, it is best to affix it to the canoe by printing it on the material with a permanent ink marker. If you are required to display a sticker or vinyl letters, an inflatable boat ID kit can be purchased at most marine stores.

Your canoe is designed to be paddled with a double bladed canoe paddle. Paddle with short and even strokes. Keep the blade close to the canoe and the paddle almost vertical. Pull with your lower hand and push with your upper hand. To reduce the amount of swaying at the front of the canoe, ease off on the force of your stroke. Paddling with a backward stroke can sometimes offer quick maneuverability.

**ALWAYS** practice safety and take the time to learn about the area where you are paddling. Get official information about the local tides and currents before paddling there. Be careful that you do not over estimate your strength, your endurance or your skill. Be careful never to underestimate weather conditions. Be aware of the dangers before you begin. Be aware of your skill level. Be sure you understand and accept the risk of these dangers. There are many paddling clubs all over the world. These can be a great source of information on places to paddle, people to paddle with and most importantly, continued safety practices.

## 5. PROPER CARE AND STORAGE

Your inflatable canoe is made of very durable materials. However, like anything else, proper use and care will increase the life of your canoe. Before storing your canoe, make sure it is both CLEAN and DRY. You may clean your canoe with a mild soap and water. **NEVER** use strong solvents to clean your canoe as they will destroy the material.

**NEVER unzip the chamber cover when the canoe is inflated.**

Be sure to rinse your canoe with fresh water after every use in salt water and allow it to dry thoroughly before storing. Use a dry towel to wipe up all moisture. It should be deflated and kept out of direct sunlight when stored. Avoid exposure to extreme temperatures (hot or cold). If your boat is exposed to freezing temperatures while storing, allow it to warm up before unfolding.

**Do not store your canoe for an extended period of time while wet. Follow the steps below for removing excess water.**

1. Unzip the 2 zippers that run down the sides of the canoe.
2. Use a sponge or towel and wipe up any excess water in the outer cover.
3. Wipe off the floor (top and bottom).
4. If there is sand or gravel in the canoe, you can hose out the cover and then wipe it down with a towel.
5. Most of the time you can just pull out the inflatable floor and wipe out the inside of the canoe absorbing most of the water, then pack it up.

## **6. REPAIRS**

All canoes come with a repair kit that includes glue and several patches. This should remain with the canoe in the event that you may need it. If service is required for your canoe, please call **866-262-9076** for assistance.

### **6.1 Repairing Small Punctures and Cuts**

1. Cut a rounded patch at least  $\frac{1}{4}$ " or  $\frac{1}{2}$ " larger than the hole or cut.
2. Clean the area where the patch will be placed with water and/or mild soap.
3. Make sure all surfaces are dry.
4. In a well ventilated area, spread a thin layer of glue on both the patch and on the damaged area. Let it sit for three to five minutes or until tacky.

### **6.2 Repairing Pinholes**

1. Inflate the PVC tube. Locate the pinhole by sponging soapy water over the tube until you see air bubbles. Mark the location of the pinhole.
2. Deflate the tube and dry the affected area. Apply a drop of glue to the pinhole.
3. Allow glue to dry completely.
4. Do not inflate the canoe for at least twelve hours.

## 7. TROUBLESHOOTING

### PROBLEM

**Does not hold air while inflating**

### SOLUTION

The spring valve uses a plunger system. The only time the plunger should be in the open position is when you are deflating. Make sure that the plunger is closed to inflate. Push the plunger in and rotate counter-clockwise.

**The canoe is sagging or under inflated**

Be sure that the right pump is being used. You need a bellows foot pump or a double action hand pump. A 12-V electric does not supply enough pressure to fully inflate the canoe. The 12-V can be used to partially inflate the canoe but one of the other pumps is needed to top it off.

**The canoe will not hold full pressure for more than a couple of hours.**

Make sure that the plunger is in the closed position. It should only be open when deflating. If it is open, the only seal is the black rubber gasket inside the cap. Even then, a little air may still leak out.

**The canoe still loses air.**

If you have checked all the previous possible reasons for the canoe losing air, then there may be a pinhole or hole somewhere on the tube. Pull tube from outer covers. Inflate. If you cannot see or hear where a leak may be, take a clean rag with soapy water and begin rubbing the tube. If a hole is present, bubbles will continually form. Repair using repair kit. If it is a very small pinhole, a dab of the glue will be sufficient.

**The floor bladder is losing air.**

Check valve gaskets and make sure that the cap tether (ring that holds the cap to the valve so as not to lose it) is not interfering with the seal. The valves must be closed tightly.

**Tube is kinked or bent in.**

The tube just needs to be adjusted. When canoe is fully deflated try adjusting the position of the tube inside of the outer shell.

**The floor has formed a large bubble.**

If two of the ridges in the floor have formed one large one, the I-beam has come apart. This is caused by over inflation. It cannot be fixed. You need a new floor.

**Water in the canoe.**

There will almost always be a little water in the canoe. One reason is the water drips off of the paddle and into the canoe. If there is an excessive amount, retreat to shore and check canoe for any slices or gashes in the outer cover.

**The canoe drifts to one side.**

A canoe will always head in the direction of your last stroke. If it is drifting in the opposite direction, the floor may not be aligned. Make sure that the floor is properly centered. Also make sure that the air bags in the bow and stern are properly inflated and the straps are pulled tight. You can also try using a kayak paddle instead of a canoe paddle.

## PADDLING NOTES:

It is always a good idea to keep notes of your paddling experiences. Your notes can serve as a reminder of what to look out for, as well as what gear to bring along, and what conditions are like.

DATE	TIME	LOCATION	NOTES

## NOTES:

Note: If your state requires the licensing of this boat, please use the form below. If you need any assistance filling out this form, please contact Advanced Elements Customer Service Department.

**MANUFACTURER'S STATEMENT OF ORIGIN**  
**FOR A VESSEL SOLD IN THE STATE OF \_\_\_\_\_**

The undersigned manufacturer hereby certifies that the new boat described below, the property of said manufacturer, has been transferred this \_\_\_\_\_ day of \_\_\_\_\_, 20\_\_\_\_ on Invoice# \_\_\_\_\_ to:

Owner's/Dealer's Name \_\_\_\_\_  
Address \_\_\_\_\_  
City, State, Zip \_\_\_\_\_

Model Name \_\_\_\_\_ Model Year \_\_\_\_\_ Manufacturer's Hull Identification# \_\_\_\_\_  
○ StraitEdge™ Canoe (AE1008) \_\_\_\_\_ HIN# \_\_\_\_\_

Type: Canoe \_\_\_\_\_ Hull Material: PVC/Polyester \_\_\_\_\_  
Length Overall: 11' \_\_\_\_\_ Beam: 36" \_\_\_\_\_

U. S. Coast Guard Capacity Plate Information (where applicable):  
Maximum persons capacity in whole persons: 400 lbs (181 kg)  
Maximum weight capacity (persons & gear): 400 lbs (181 kg)

The manufacturer further certifies that this was the first transfer of such new boat and that all information given herein is true and accurate to the best of their knowledge



P.O. Box 5128 Concord, CA 94524

Signature \_\_\_\_\_

**FIRST ASSIGNMENT**

FOR VALUE RECEIVED, in the amount of \$ \_\_\_\_\_,  
the undersigned hereby transfers the Certificate of Origin and the boat described therein  
to \_\_\_\_\_

Address \_\_\_\_\_

and certifies that the boat is new and has not been registered in this or any other state; Advanced Elements, Inc. also warrants the title of said boat at time of delivery, subject only to the liens and encumbrances as set out below:

Amount of Lien	Date	To whom Due	Address
_____	_____	_____	_____

Dates \_\_\_\_\_ 20\_\_\_\_, at \_\_\_\_\_

By: \_\_\_\_\_

Transferrer (Firm name) Sign Here \_\_\_\_\_

Before me personally appeared \_\_\_\_\_ who by me being duty sworn under oath says the statements set forth above are true and correct. Subscribed and sworn to me before this \_\_\_\_\_ day of \_\_\_\_\_ 20\_\_\_\_\_.

\_\_\_\_\_  
Notary Public Date commission expires \_\_\_\_\_

(SEAL)

# *Declaration of Conformity*

(according to ISO/IEC Guide 22 and EN 45014)

**Manufacturer's Name:** Advanced Elements, Inc.

**Manufacturer's Address:** P.O. Box 5128  
Concord, CA 94524

*declares, that the product:*

**Product Name:** StraitEdge™ Canoe

**Model Number (s):** AE1008

to which this declaration relates, **meets the essential health and safety requirements** and is in conformity with the relevant EU Directives listed below:

General Product Safety Directive

using the relevant section of the following EU standards and other normative documents:

EN / USI 6185-1 : 2006

ABYC H28-76

Date: January 1, 2011



Clay Haller, President

This product complies with European directives for recreational vessels as published by the International Organization for Standardization (ISO).

## LIMITED WARRANTY

Advanced Elements, Inc. warrants this product to be free from defects in material or workmanship for a period of one year from the date of purchase. Products that prove to be defective under conditions of normal and proper use during the warranty period because of defective workmanship or faulty material will be replaced or repaired without charge. For warranty service, contact Advanced Elements, Inc.

Advanced Elements, Inc shall inspect all warranty claims and in the event of a defect, repair or replace the defective part or entire item, at its option. The purchaser must, before return of a defective product, obtain from Advanced Elements, Inc, a return authorization number and return center address. Please write or call as listed below. Once an authorization number is obtained, the purchaser must ship the product, POSTAGE PREPAID, to Advanced Elements, Inc for repair. Do not ship to P.O. Box address as it may be sent back.

This warranty does NOT cover:

Products used for rental, for hire or in professionally guided tours and other uses not considered normal recreational purposes; and punctures, cuts and abrasions sustained in normal use; and items involved in accidents; and items damaged in white water mishaps, and other unreasonable uses or improper storage.

Advanced Elements, Inc shall within (30) days from receipt of an authorized return from purchaser, perform its responsibilities in conformance with this warranty.

THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION OF THE FACE HEREOF. ADVANCED ELEMENTS SHALL NOT BE HELD LIABLE FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES.

THIS WARRANTY IS INCLUSIVE IN LIEU OF ALL OTHER WARRANTIES.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

Advanced Elements, Inc.

P.O. Box 5128, Concord, CA 94524

Toll Free - 866-262-9076 - email [info@advancedelements.com](mailto:info@advancedelements.com) - [www.advancedelements.com](http://www.advancedelements.com)

(cut along line)

### ADVANCED ELEMENTS WARRANTY REGISTRATION

(PLEASE TYPE OR PRINT CLEARLY)

Please complete and mail card to Advanced Elements within 10 days. It will register your product.

**Mail to: Advanced Elements, Inc.**  
**P.O. Box 5128, Concord, CA 94524**  
**Attn: Warranty Department**

Owner's Name \_\_\_\_\_  
Address \_\_\_\_\_ Apt. \_\_\_\_\_  
City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_  
Model \_\_\_\_\_ Serial # (12 characters) XZE \_\_\_\_\_  
Purchase Date \_\_\_\_\_ (located at rear of boat)  
Store Name \_\_\_\_\_  
Store Address \_\_\_\_\_  
City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_  
Email \_\_\_\_\_

*Thank you for responding to the following.....*

1. How did you first learn of this product?

Dealer     Friend     Magazine     Radio     TV     Catalog     Other

2. What most influenced your decision to purchase this product?

Price     Features     Style     Quality     Other

## **IMPORTANT!**

**PLEASE READ THIS MANUAL CAREFULLY BEFORE PROCEEDING.  
AFTER READING THIS MANUAL, SAVE THESE INSTRUCTIONS  
FOR FUTURE REFERENCE.**

**If you would like a catalog of our latest products please  
visit our website at  
[www.advancedelements.com](http://www.advancedelements.com)  
or call Toll Free 866-262-9076**

**PLEASE COMPLETE THE OTHER SIDE OF THIS  
WARRANTY REGISTRATION CARD AND RETURN TO ADVANCED ELEMENTS, INC.**

PLACE  
STAMP  
HERE



P.O. Box 5128  
Concord, CA 94524  
1-866-262-9076  
[www.advancedelements.com](http://www.advancedelements.com)  
Email: [info@advancedelements.com](mailto:info@advancedelements.com)